
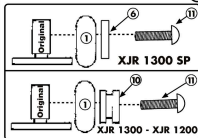


MONORACK SPECIFICO - SPECIFIC MONORACK  
 MONORACK SPECIFIQUE - SPECIFISCHES MONORACK - MONORACK ESPECIFICO

**YAMAHA XJR 1200** '95/'98  
**YAMAHA XJR 1300** '99/'00

ISTRUZIONI DI MONTAGGIO - MOUNTING INSTRUCTIONS  
 INSTRUCTIONS DE MONTAGE - BAUANEITUNG - INSTRUCCIONES DE MONTAJE

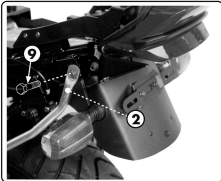

1



**MONORACK**  
 Q.TY n.2 Dn-1x

2



**GAMBA POSTERIORE**  
 REAR SUPPORT  
 SUPPORT POSTERIEURE  
 LAGER  
 SOPORTE TRASERO  
 Q.TY n.2 Dn-1x

3



**RONDELLA 6 X 18**  
 WASHER 6 X 18  
 RONDELE 6 X 18  
 ARANDELA 6 X 18  
 Q.TY n.2

4



**VITE T80 M6 X 55**  
 SCREW M6 X 55  
 VIS M6 X 55  
 SCHRAUBE M6 X 55  
 TORNILLO M6 X 55  
 Q.TY n.2

5



**VITE TCEI M 6 X 55**  
 SCREW M 6 X 55  
 VIS M 6 X 55  
 SCHRAUBE M 6 X 55  
 TORNILLO M 6 X 55  
 Q.TY n.2

6



**RONDELLA ø 8 X 14**  
 WASHER ø 8 X 14  
 RONDELE ø 8 X 14  
 ARANDELA ø 8 X 14  
 Q.TY n.2

7



**TAPPO COPRIVITE**  
 COVER SCREW CAP  
 CÂCHE VIS  
 SCHRAUBE STOPFER  
 TAPILLOS TORNILLOS  
 Q.TY n.2

8



**DADO SPECIALE 14X6**  
 (RHS - 8x2)  
 SPECIAL BOLT  
 (ECCOLI) SPECIAL  
 ORIGINAL SCHRAUBE  
 TUBERCA ESPECIAL  
 Q.TY n.2

9



**VITE ORIGINALE**  
 ORIGINAL SCREW  
 VIS D'ORIGINE  
 ORIGINAL SCHRAUBE  
 TORNILLO ORIGINAL  
 Q.TY n.-

10



**DISTANZIALE ORIGINALE**  
 ORIGINAL SPACER  
 ENTRETREUSE ORIGINAL  
 ORIGINAL TÜRSTÜTZLÖCK  
 DISTANCIADOR ORIGIN.  
 Q.TY n.-

11



**VITE ORIGINALE**  
 ORIGINAL SCREW  
 VIS D'ORIGINE  
 ORIGINAL SCHRAUBE  
 TORNILLO ORIGINAL  
 Q.TY n.-

12



**DADO AB R6AS M6**  
 (LH/RHS)  
 BOLT  
 ECCIOLI BAISSE  
 SPECIAL WUTTER  
 TUBERCA ESPECIAL  
 Q.TY n.2

13

**KIT MONORACK 1F**

Q.TY n.1

**WARNING!**  
 -TOGLIERE I GANCI ORIGINALI  
 -TAKE THE ORIGINAL HOOKS OFF  
 -ENLEVER LES CROCHETS ORIGINAUX  
 -DIE ORIGINALHAKEN ABNEHMEN  
 -QUITAR LOS GANCHOS ORIGINALES

